


## 蓝牙无线耳机适配器

### BWM36 快速操作指南

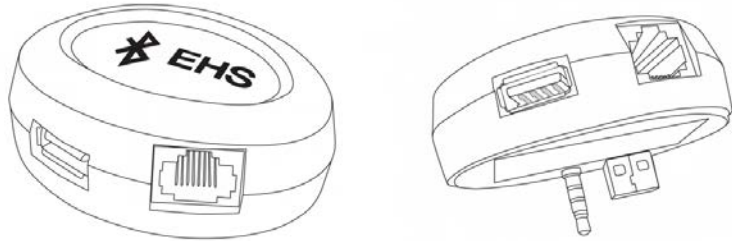


BWM36 多功能蓝牙无线耳机适配器，整合了蓝牙、无线耳机适配器和 USB 供电功能为一体，该产品适用于话机硬件版本为 2.3.0 和软件版本为 3.2.0.0 以上的 3XX/4XX/6XX 系列 IP 话机，BWM36 即插即用，无需安装，价格低、性能稳定及功能强大赢得了业界良好口碑。

**注意：**蓝牙功能与无线耳机适配器功能不能同时使用。


#### 配件清单

列表	数量
BWM36 设备	1
RJ45 Cord	1
3.5mm-RJ45 Cord	1
RJ9 Cord	1
快速操作指南	1


#### 设备安装

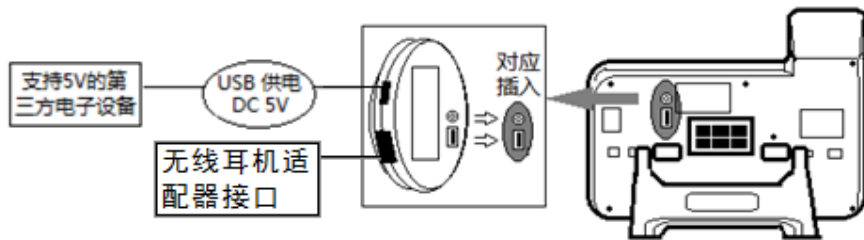

#### 无线耳机连接①

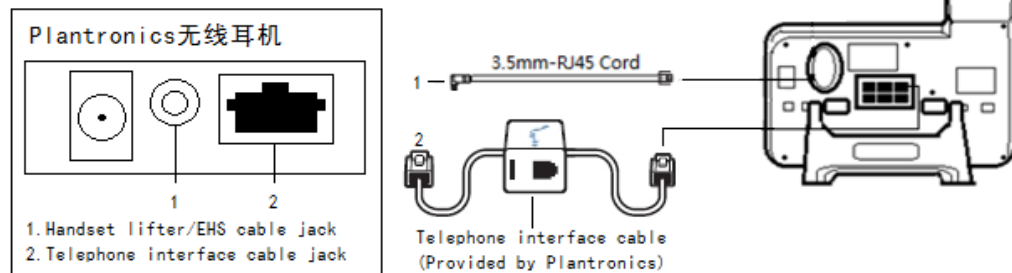

#### 无线耳机连接②

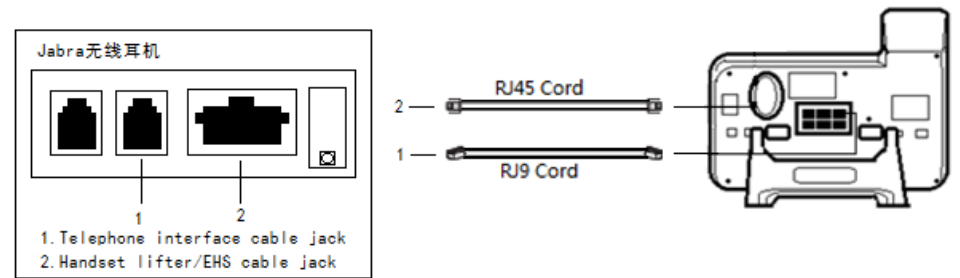

**注意：**Jabra 无线耳机模式需调节成 RHL 模式。

#### 蓝牙设置

下方文字描述将指明 IP 话机借助 BWM36 设备实现与蓝牙耳机的相互使用。

##### ● 通过话机用户界面去激活蓝牙

按菜单>系统设置>高级设置>密码(默认为空值)>蓝牙

- 在蓝牙选项处按 **OK** 或**进入**软按键选择开启。
- 在与蓝牙耳机匹配之时，请检查并确保蓝牙耳机工作正常且处于搜索匹配状态，然后选择“搜索蓝牙设备”搜索蓝牙耳机。
- 选择已显示的蓝牙耳机，然后按连接软按键。
- 稍等片刻后，蓝牙耳机将会自动连接到 IP 话机，IP 话机的 LCD 将显示蓝牙相关信息。

##### ● 查看蓝牙耳机信息

按菜单>系统设置>高级设置>密码(默认为空值)>蓝牙>当前设备

- 设备名称：蓝牙耳机的名称。
- MAC 地址：蓝牙耳机的 MAC 地址。
- 蓝牙状态：蓝牙耳机的连接状态。
- 关闭软按键：断开蓝牙耳机的连接。

##### ● 从 IP 话机上来管理你的蓝牙耳机

按菜单>系统设置>高级设置>密码(默认为空值)>蓝牙>适配蓝牙设备

- 话机 LCD 界面列出已配对或连接过的蓝牙设备，你可以在该界面下进行删除或者重新连接蓝牙耳机的管理。

ES CENE

广州市亿景通信技术有限公司


地址：广州市天河区东圃镇黄村路 51 号粤安工业园 C 栋 4 楼

网址：<http://www.escene.cn>

客户服务：400 090 5818

# Bluetooth and Wireless Headset Adapter Module

## BWM36 Quick User Guide

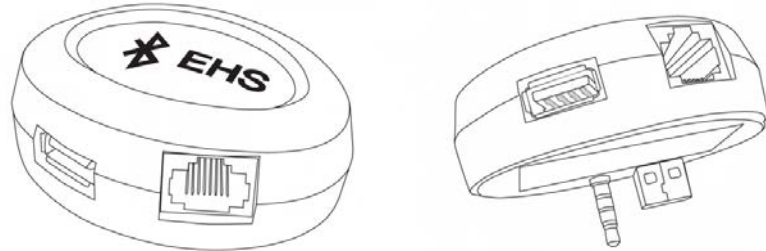


BWM36 is Integrated with the Bluetooth, Wireless headset adapter and USB charging. It can compatible with 3xx/4xx/6xx series IP Phone, the hardware/software version must exceed Rev 2.3.0/3.2.0.0. BWM36 is easy to use, free of installation, PNP. It has low cost, stable performance and powerful function.

**NOTE:** Bluetooth and Wireless Headset feature cannot be used at the same time.


### Packing Contents

Name	Amount
BWM36	1
RJ45 Cord	1
3.5mm-RJ45 Cord	1
RJ9 Cord	1
Quick User Guide	1


### Installation

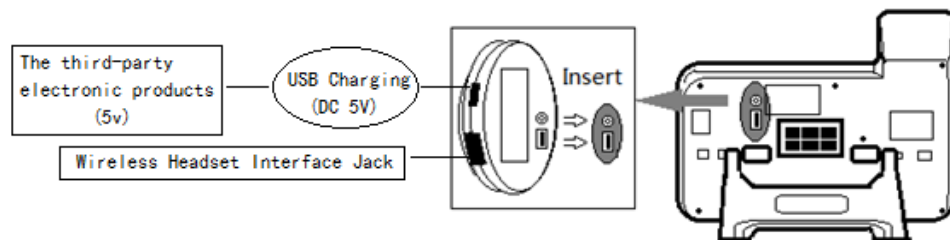

### Wireless Headset Installation ①

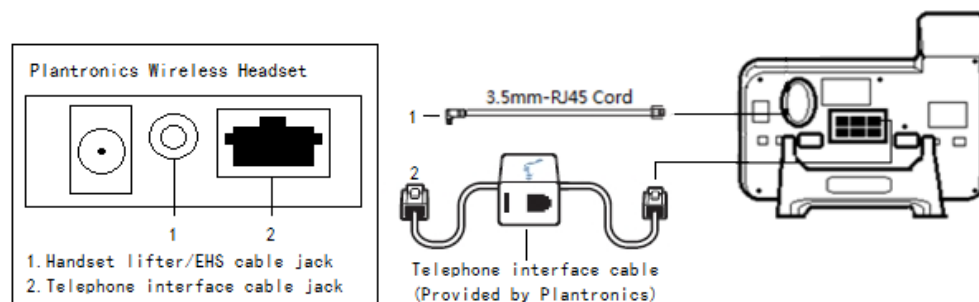

### Wireless Headset Installation ②

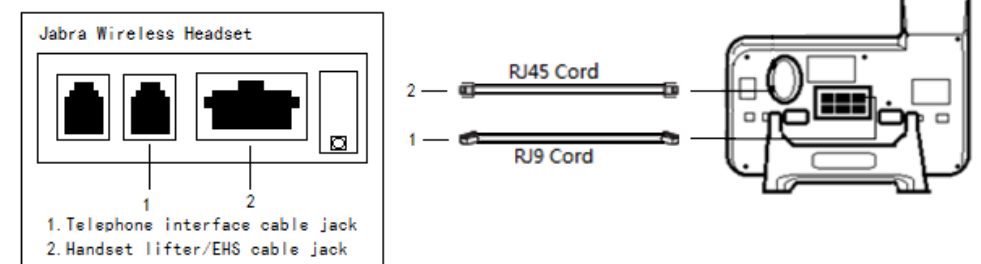

**NOTE:** Jabra Wireless Headset need to be adjusted to RHL model

### Bluetooth Setting

The following information shows the Bluetooth setting.

- **To activate the Bluetooth mode via phone user interface**  
Press Menu>System Settings>Advanced Settings>Password(Default is empty)>Bluetooth
  - Press **OK** or **Enter** soft key to select On from the Bluetooth field.
  - Before pairing Bluetooth headset, check the indicator on the Bluetooth headset to make sure the Bluetooth headset is discoverable. And then, press "**Search Bluetooth Devices**" to search the Bluetooth devices.
  - Select the desired Bluetooth headset and press **Connect** soft key.
  - After a while, the Bluetooth headset is automatically connected to your IP Phone. The Bluetooth information will display on the LCD screen.
- **To view the Bluetooth headset information**  
Press Menu>System Settings>Advanced Settings>Password(Default is empty)>Bluetooth>Active device
  - **Device name:** the name of the Bluetooth headset.
  - **MAC Address:** the MAC address of the Bluetooth headset.
  - **Bluetooth Status:** the Status of the Bluetooth headset.
  - **Shut Soft Key:** Disconnect Bluetooth headset.
- **To manage your Bluetooth headset from your IP Phone**  
Press Menu>System Settings>Advanced Settings>Password(Default is empty)>Bluetooth>Paired Devices List
  - You can Delete or re-Connect your Bluetooth headset from your IP Phone.

**ES CENE**

ESCENE COMMUNICATION CO.,LTD.

Web: <http://www.escene.cn/en>

Address: Floor 4 Building C YueAn Industrial Park No.51 Huangcun Road Tianhe District Guangzhou China